 


# 4 Arm Steel Rotary Airing 50M

## INSTRUCTIONS

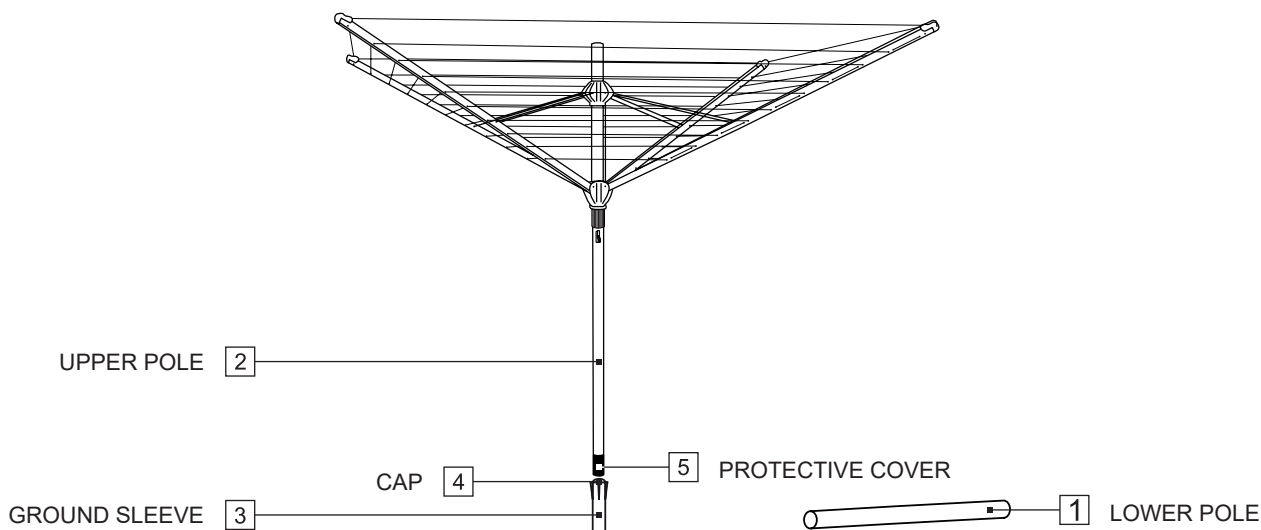

### Assembly Instructions

Carefully remove all of the packaging.

Check that all of the drying lines are tangle free before assembly.

Push the lower pole into the upper section of the rotary ailer.

Determine a suitable location to install the rotary ailer, making sure that there is sufficient space for it to rotate freely when extended - 205 cm rotating diam.

Insert the ground spike into the ground where the rotary ailer will be positioned, then fit the rotary ailer into the ground spike.


### Directions for Use

Open up the umbrella system of the rotary ailer and lock it into position.


Load wet items onto the drying lines, making sure that they are distributed evenly.

Allow the items to dry thoroughly.

### How to use the ground sleeve, please refer to the below picture

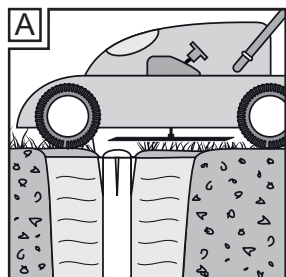


If you would like to secure the ground sleeve [3] into a lawn, make sure that the cap [4] is just below ground level in order to prevent damages when mowing the lawn (see Fig. A).

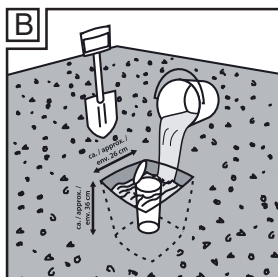

Dig a hole with a width of 26 cm and a depth of approx. 36 cm (see Fig. B).


If you would like to set up the product in a location with a sandy, rocky or earthy surface, encase the ground sleeve [3] in concrete to ensure it is firmly positioned.

Mix a fairly dry concrete mass with 3 parts gravel, 2 parts sand and 1 part cement.

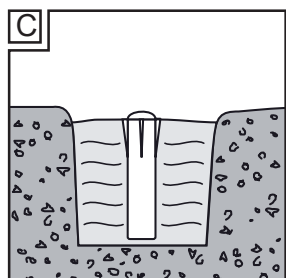

Partially fill the hole with this concrete and position the ground sleeve [3]. The ground sleeve [3] must be just below the ground level (see Fig. C).

Hold the cap [4] in position so that no concrete gets into the ground sleeve [3].

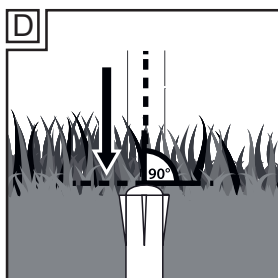

Insert the included steel tube [1] into the ground sleeve [3] before the concrete hardens. Then use a spirit level to check the vertical position of the product (see Fig. D).

After the concrete mass has completely hardened, you can now insert the rotary ailer [2] into the lower pole [1] in the ground sleeve [3]. To do so, remove the protective cover [5] from the upper pole [2]. You can now use the product.

### Getting Started

Remove the clothes line from the box.

Remove any packaging from the rotary ailer.

Place the packaging inside the box and either store or dispose of safely.

### Storage

When the rotary ailer is not in use, it is recommended that the umbrella system is collapsed down and that the rotary ailer is covered, then tied securely.

**Note:** When both sections of the rotary ailer are left fastened together for prolonged periods, separation may become difficult.

### Caution

Max load 40 kg, pls do not overload the rotary ailer.

Make sure that drying lines are tangle free before opening up the umbrella system.

This product is not a toy. Keep out of the reach of children.

For domestic use only, not recommended for commercial purposes.

