



ATRIUM SYSTEM®
s c h o d y s t a i r s s c a l e

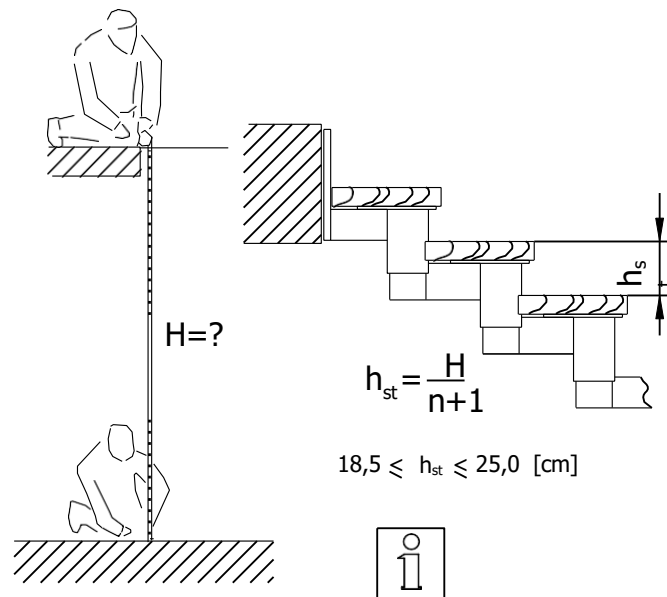


ATRIUM
BASIC

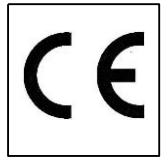


Onderdelenlijst / Liste des pièces

a	EM-42	b	EM-40	c	EM-41	d	SM-43	e	RS-160P				
f	DM-180g/DM-180Pg	g	DM-180K/DM-180KP	h	6x35	i	PS-93	j	LT-84PE				
optie / option 		optie / option 											
j1	M5x20	j2	M5	k	PT-101	l	3,9x19	m	ZA-104	n	ZA-102	o	S3+S4+S6
p	NF-310/25	p1	M6x12	p2	M6	r	ZŁ-80P	r1	M8x22	r2	M8	s	M8x10
t	FV-1150PE	u	SC-283	OOK BENODIGD VOOR MONTAGE ! ÉGALEMENT NÉCESSAIRE POUR LE MONTAGE ! 				Voorzorgsmaatregelen / Précautions 					

 
Montagevolgorde / Ordre de montage




1.1

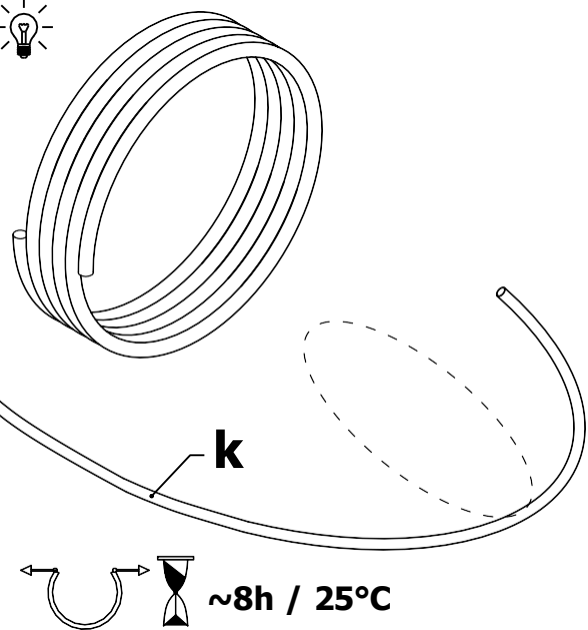


2.1

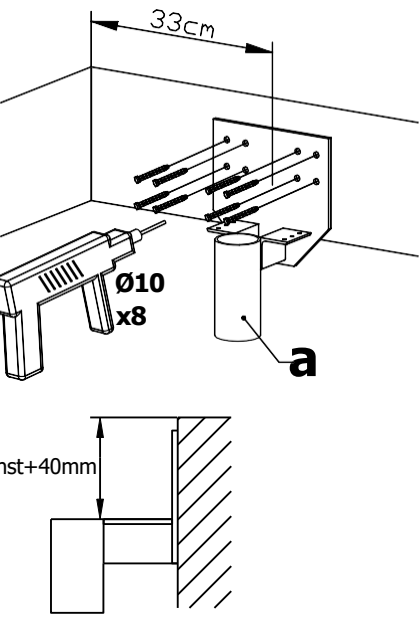


2.2

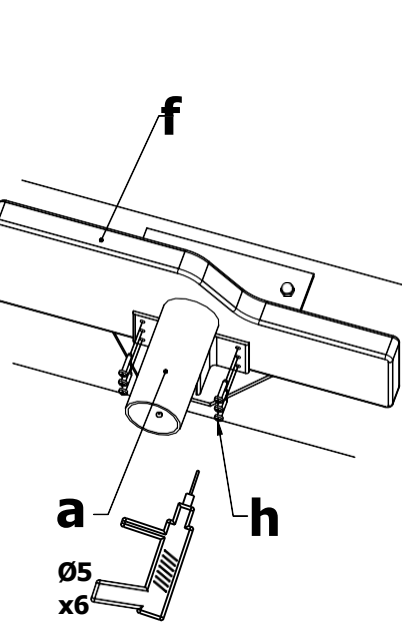


2.3

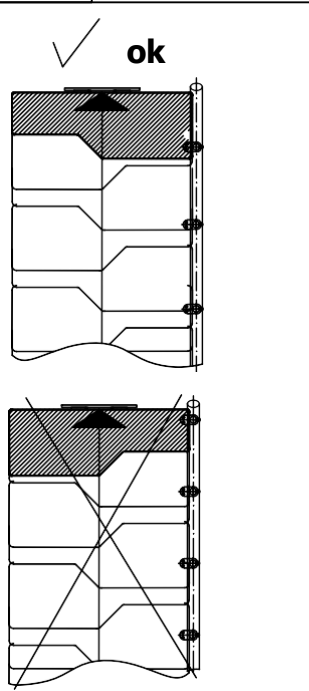


3.1

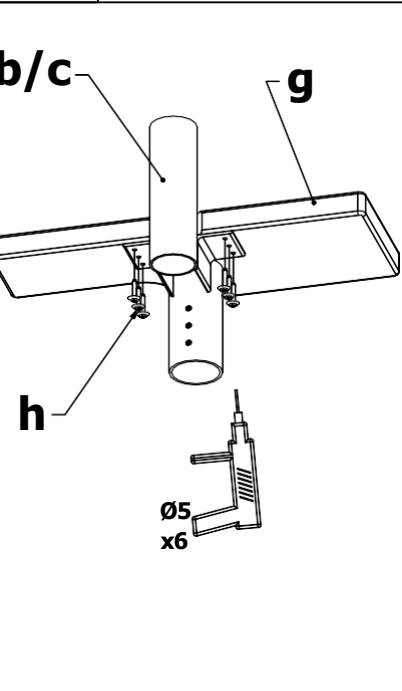


3.2

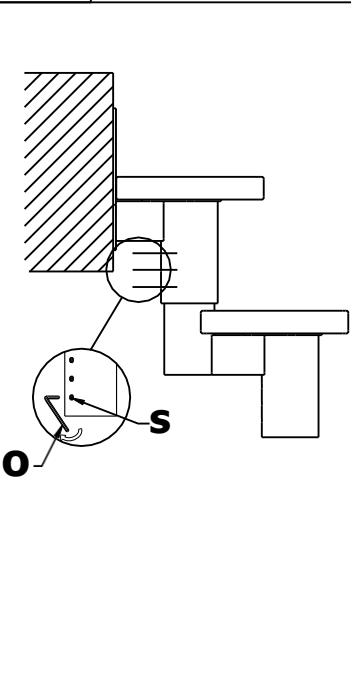


3.3

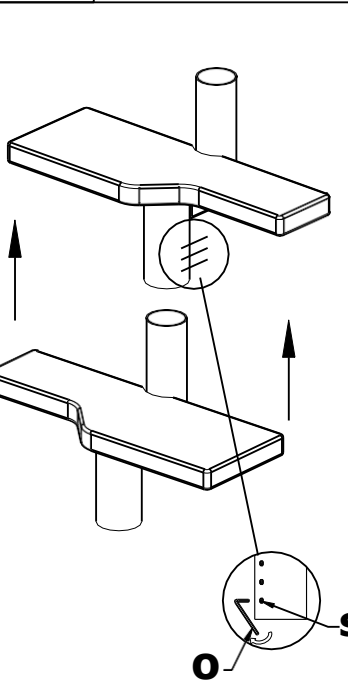


3.4

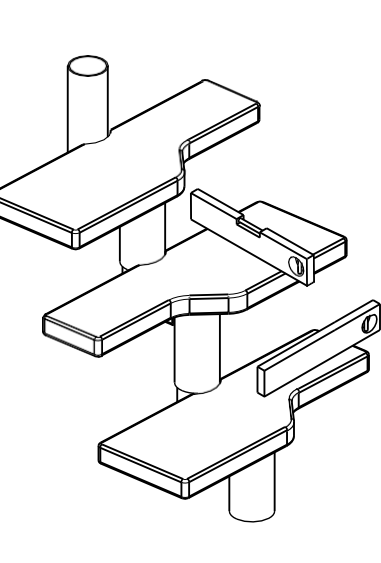


3.5

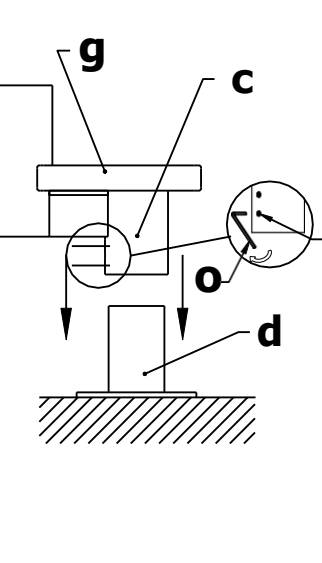


3.6

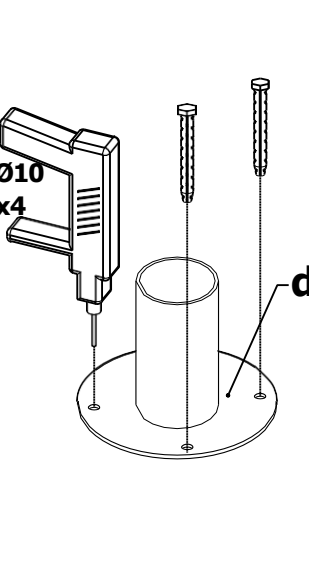


4.1

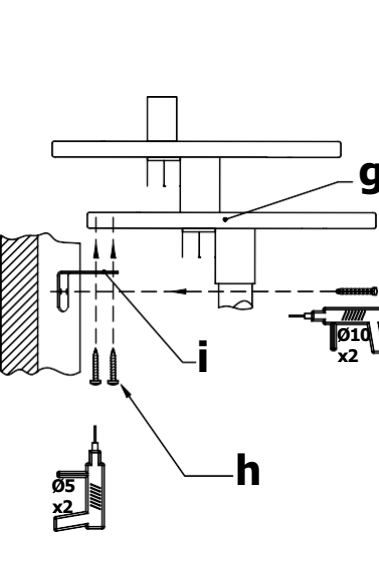


5.1

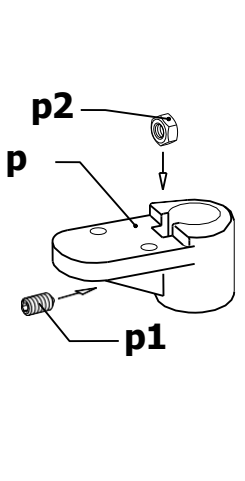


5.2

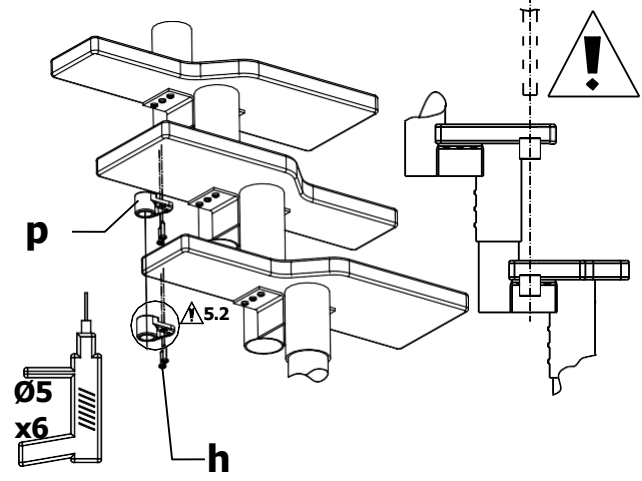


5.3

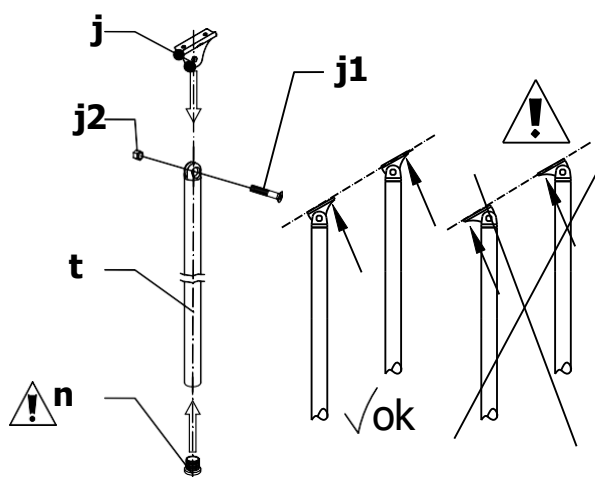


5.4

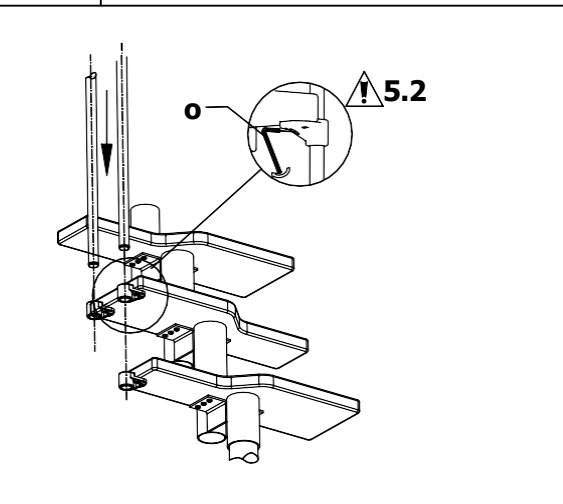


6.1

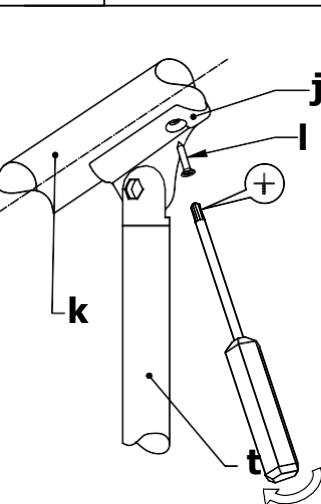


6.2

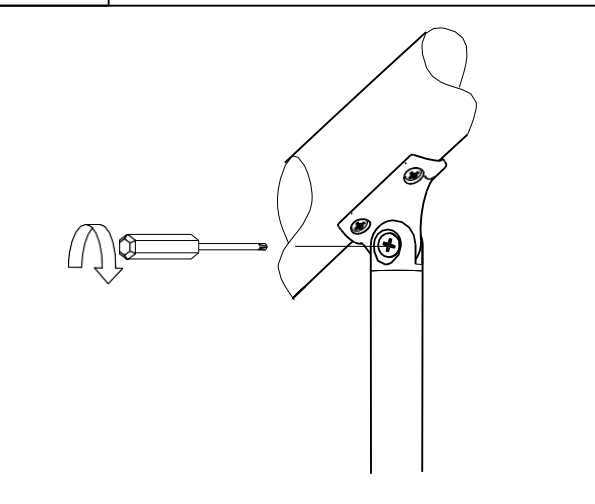


6.3

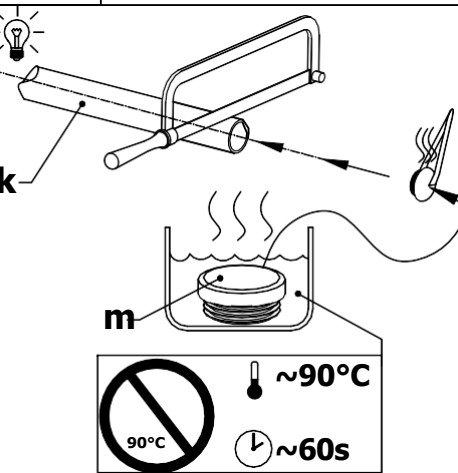

7.1

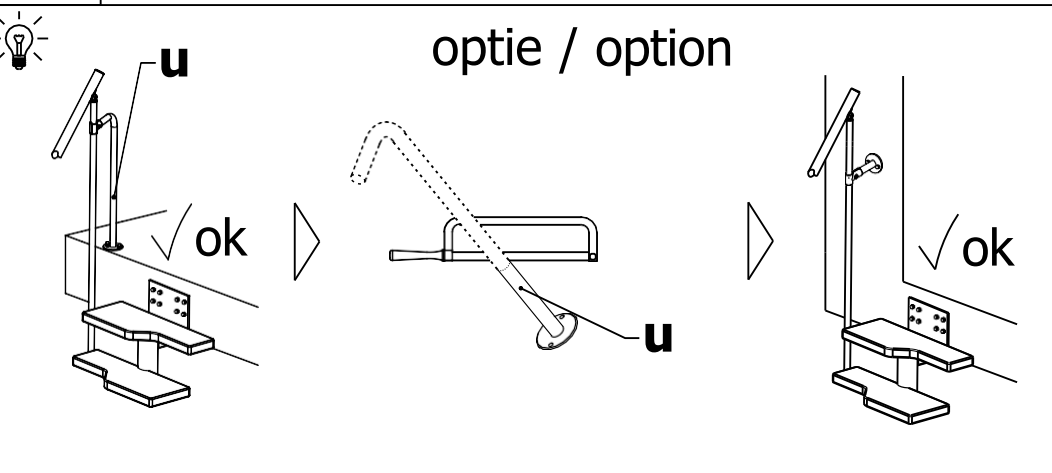

7.2

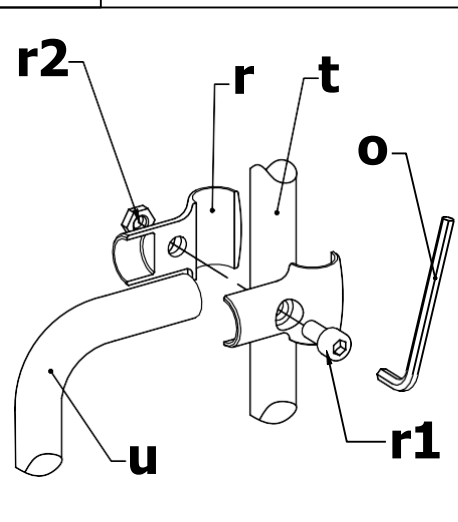

7.3

