

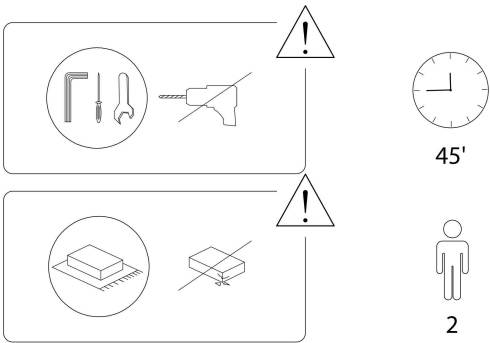
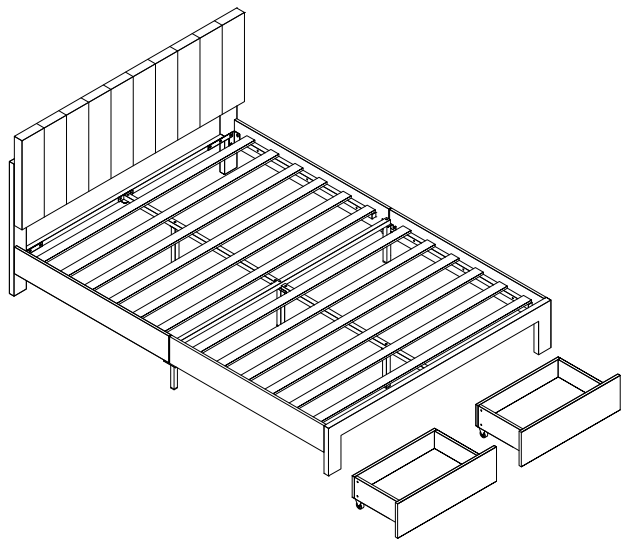
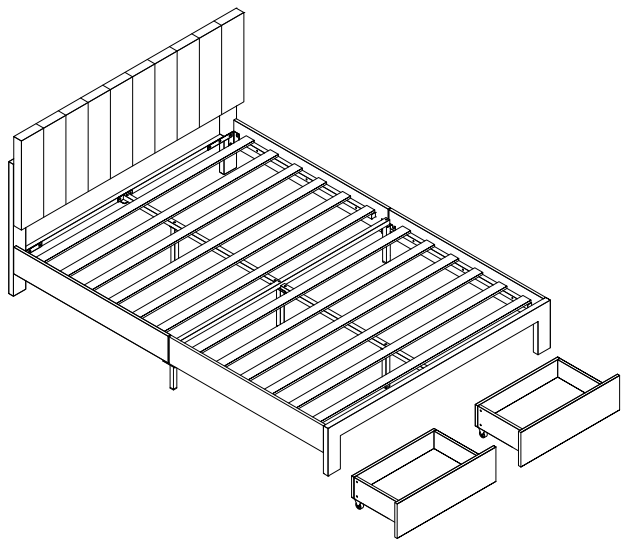
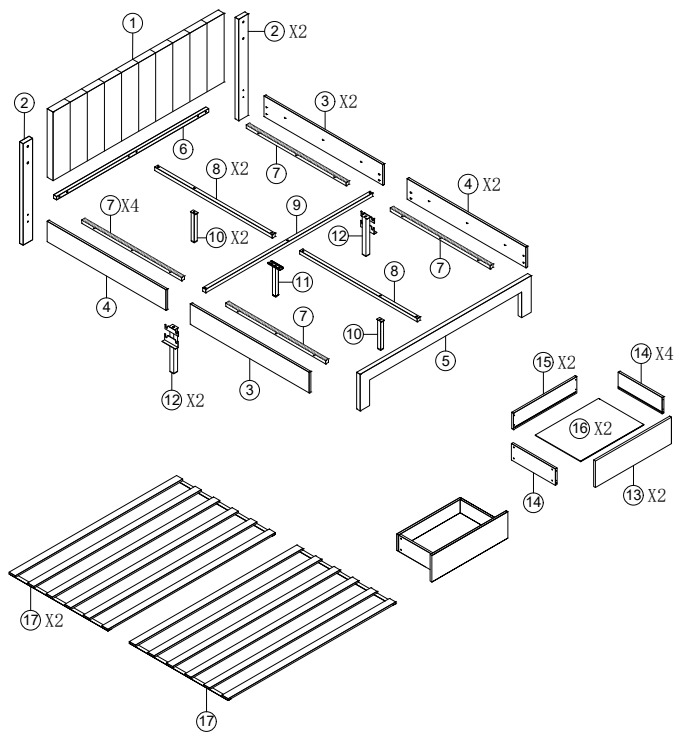













LONZAC



1/11



 X1	 X2	 X2
 X2	 X1	 X1
 X4	 X2	 X1
 X2	 X1	 X2
 X2	 X4	 X2
 X2	 X2	


A  X1	B  M8x16mm X32	C  M8x40mm X21
D  M8x50mm X4	E  M3x20mm X16	F  X16
G  X16	H  X4	I  X2
J  X2	K  X8	

4/ 11

1

1	2	A	D
---	---	---	---


You can chose the hole a and c, or b and d or c and e.

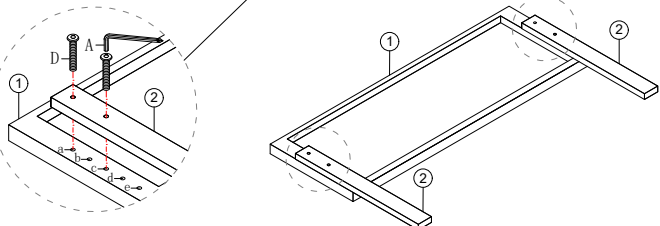

2

3	4	7	A	C
---	---	---	---	---

M8x40mm X12

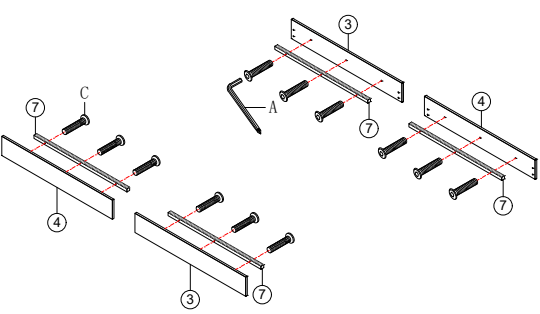


5/ 11

3

1	2	A	B	H
---	---	---	---	---

M8x16mm X6


X2

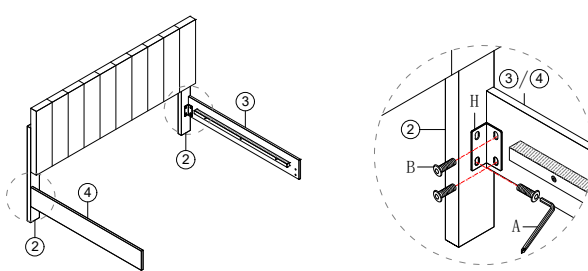

5

3	4	12	A	B
---	---	----	---	---

M8x16mm X8

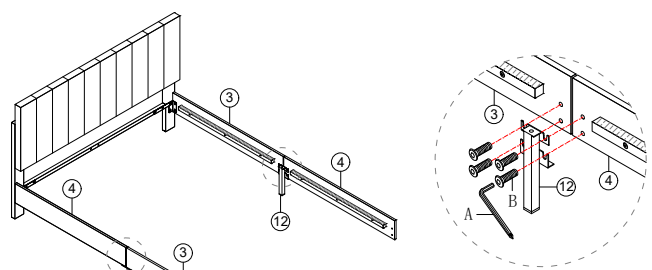


4

2	6	A	B	J
---	---	---	---	---

M8x16mm X6

X2

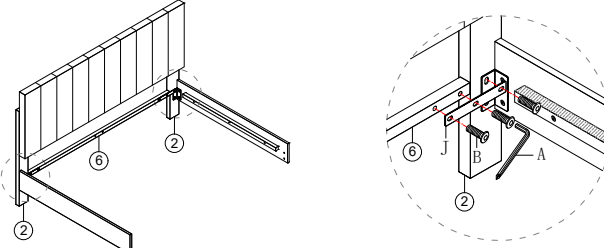


6

3	4	5	A	B	H
---	---	---	---	---	---

M8x16mm X8

X2


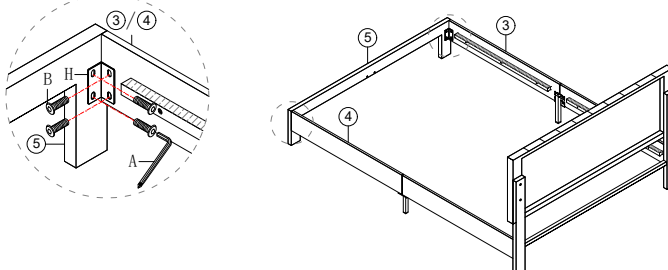


6/ 11

7/ 11



7

5	6	A	B	I

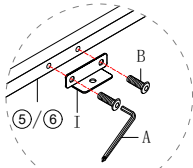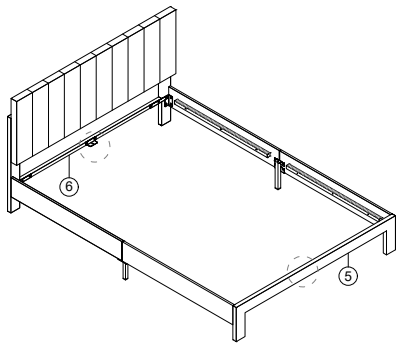



9

8	A	C

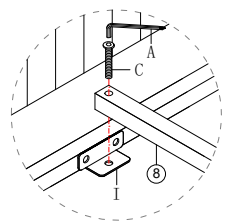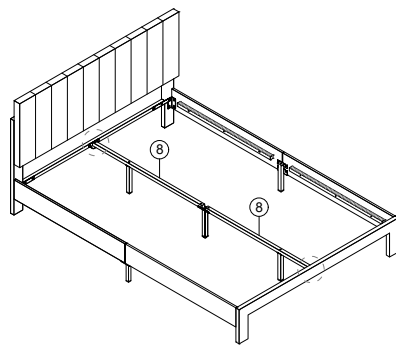

8



8	10	11	A	C

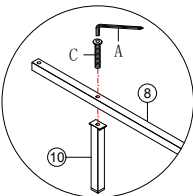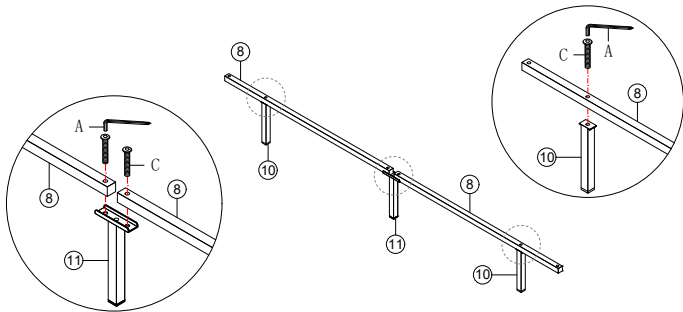

8/ 11

10


9	11	12	A	C

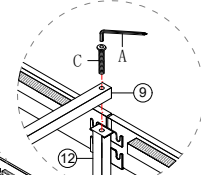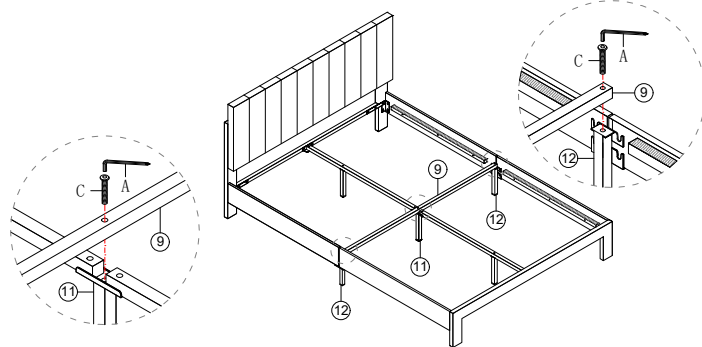

9/ 11

11x2



13	14	15	16	A
E	F	G	K	

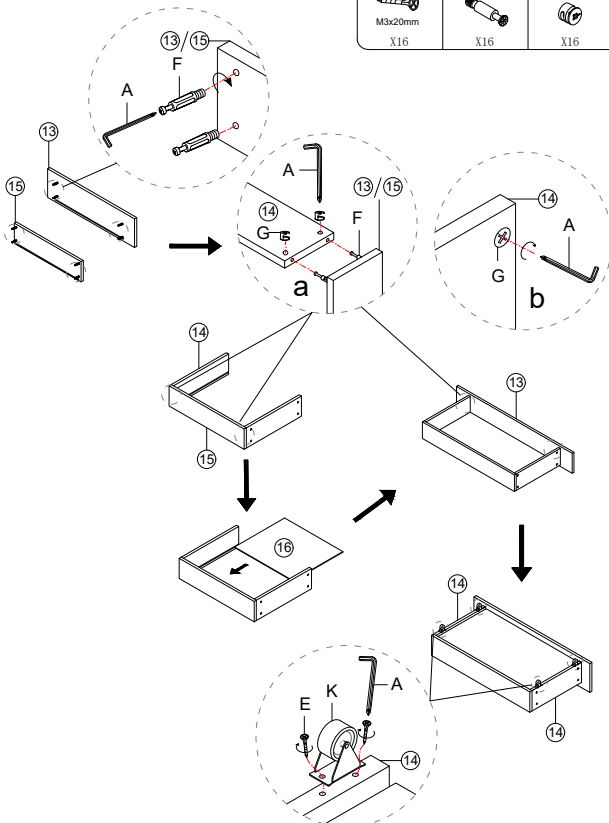


10/ 11

12

7	17

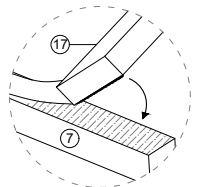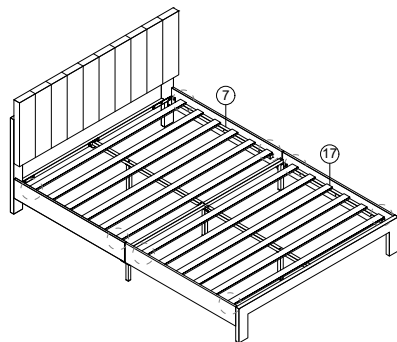

13

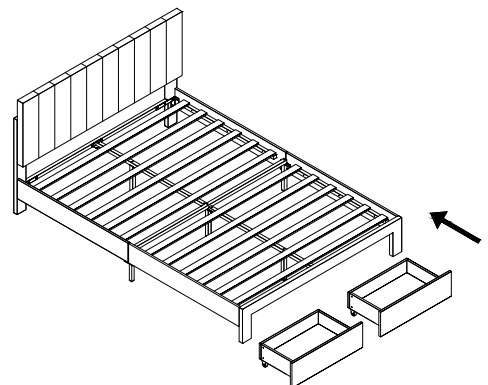

11/ 11